 
 
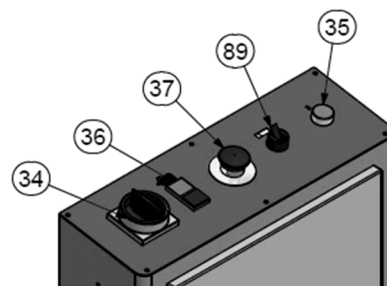 
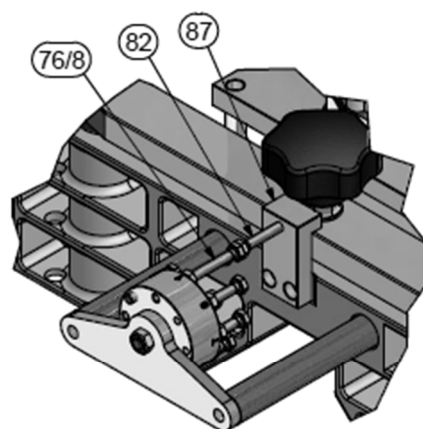 
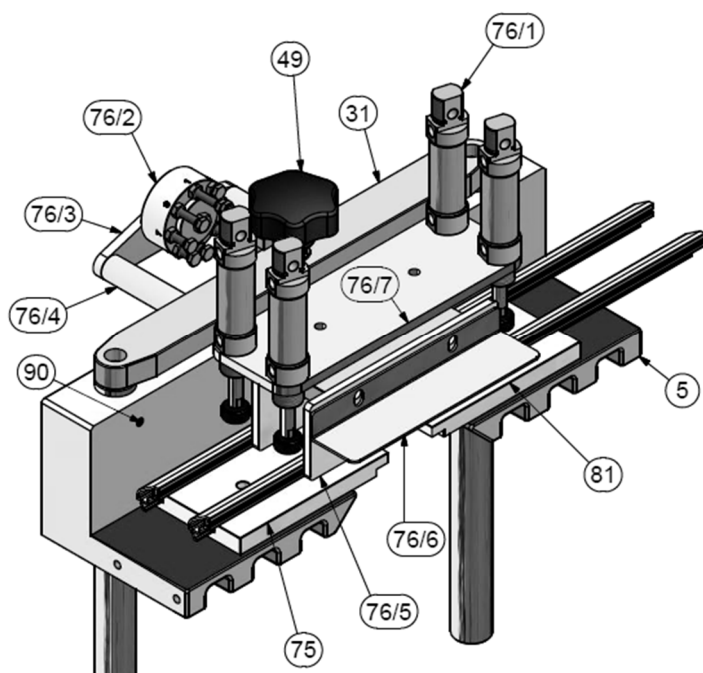 


PARTS LIST

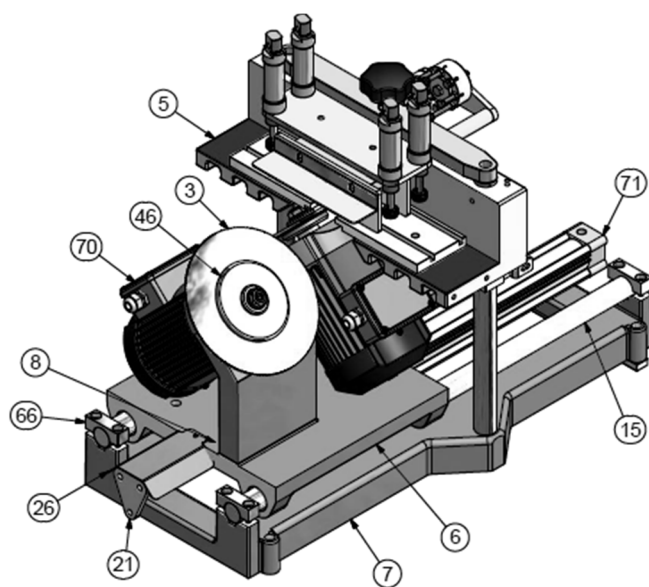

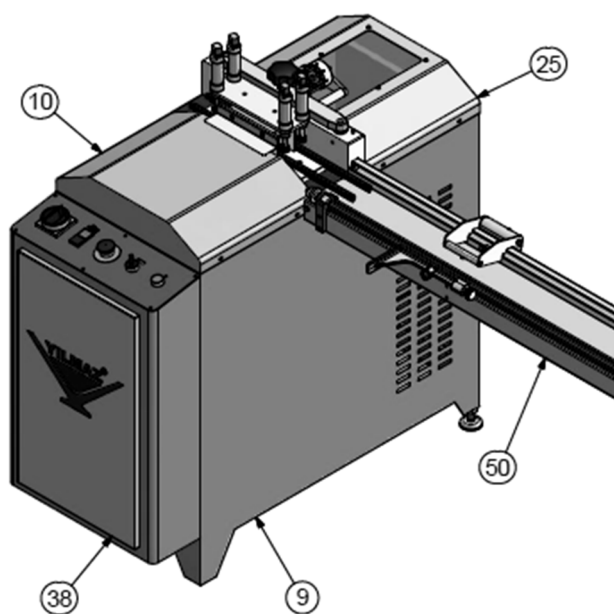

NO	STOCK CODE	QTY	NO	STOCK CODE	QTY
3	1SK010000-0001	1	76	2TU012210-1016	1
5	2TU012510-0392	1	76/1	1PN020000-0191	1
6	2TU012510-0308	1	76/2	2TU011110-1135	1
8	2TU012510-0311	2	76/3	2TU011441-0720	1
9	1SA010000-0051	1	76/4	2TU014010-0198	1
10	1SA030000-0091	1	76/5	2TU011441-0709	2
15	2TU014010-0093	2	76/6	2TU011441-0719	1
21	2TU011441-0289	1	81	2TU012310-0103	1
25	1SA030000-0090	1	87	2TU012210-1047	1
26	1SA050000-0152	1			
31	2TU012210-0906	1			
38	1SA020000-0026	1			
46	1SK010000-0008	1			
49	1PL020000-0008	1			
50	3UA010030-0097	1			
66	2TU011210-0643:	4			
70	3UA730030-0008	2			
71	1PN020000-0122	1			

SPARE PARTS LIST			
PART NO	PICTURE	CODE	PART NAME
1		1EL090000-0003	XB7-NA31 START BUTTON
2		1EL090000-0001	XB4-BS8442 EMERGENCY STOP BUTTON
3		1EL050000-0027	(SCHRACK) RT 424024 24V DC 2 C/0 8-10A RELAY
4		1EL040000-0405	ASL09-30-10-81 (24V DC 50-60) CONTACTOR
5		1EL090000-0016	XB4-BW73731B5 (24V AC/DC LED) START-STOP BUTTON
6		1EL090000-0033	ZBA 710 START-STOP BUTTON COVER
7		1EL200000-0037	RZT6-03ZUS-KWO NO (1025522) SENSOR